Maxxima®

Trimless Horizontal Step Light Installation Guide

MEW-SW305

www.maxximastyle.com

⚠ WARNINGS ⚠

- Risk of fire or electric shock.
- If you are unfamiliar with electrical installations, consult a qualified electrician before proceeding.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.
- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

CAUTIONS

- To ensure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code (N.E.C.) and applicable local codes or ordinances.
- Use UL or IEC approved wire only for input/output connections.
- Suitable for wet locations
- Wall Mounted only
- 120 VAC, 5W, 60 Hz only

INSTALLATION INSTRUCTIONS

1. Ensure that power has been turned off by switching the circuit breaker or by removing the fuse from the fuse panel.
2. If replacing a previous fixture, disconnect and remove that light.
3. Select the desired color temperature, as seen in Figure 1.
4. Secure the fixture to the junction box using the two screws provided, as shown in Figure 2.
5. Plaster over the plaster frame, ensuring not to apply too much plaster to fill beyond the raised trim, as shown in Figure 3.
6. Using the provided wire nuts, connect the hot (black) wire to the black supply wire, the neutral (white) wire to the white supply wire, and the ground (green/bare copper) wire to the green wire, shown in Figure 4.
7. Place all wiring and connections into the junction box, ensuring none are pinched.
8. Align the fixture with the plaster frame and gently push to lock in place.
   A. To remove the light, push firmly inward on the face of the fixture (not the plaster frame), and the fixture should pop outward slightly for easy removal.
9. Installation is now complete. Restore power and check operation of the light fixture.

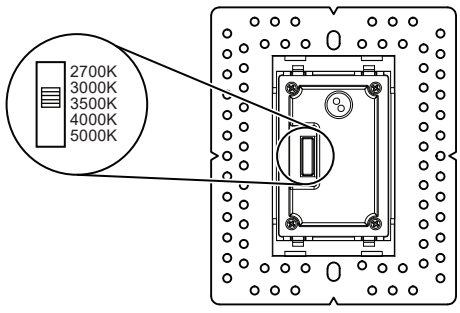
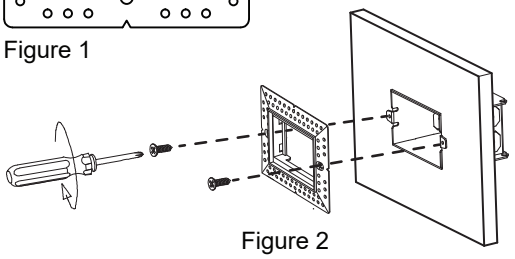
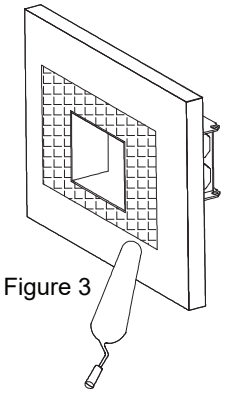


Figure 1


Figure 2


Figure 3

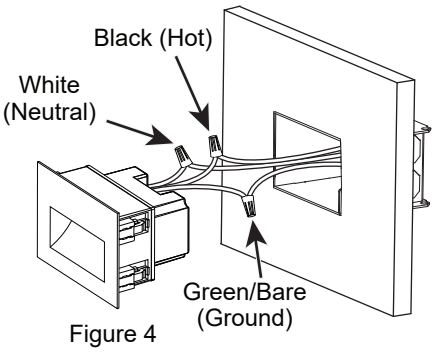


Figure 4

Note: When using this fixture outside, caulk the connection between the faceplate and the wall/step to prevent water from seeping into the junction box.

FIXTURE CARE AND MAINTENANCE

Ensure fixture is at ambient temperature before cleaning.
Clean the lens and faceplate with a non-abrasive cleaning solution.
Do not open the sealed fixture to clean LEDs.

3-YEAR WARRANTY

Maxxima extends a 3-year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warrantied product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

info@maxximastyle.com 866-MAXXIMA (629-9462) www.maxximastyle.com 125 Cabot Court Hauppauge, NY 11788

Rev A - 01/26