Maxxima®

Ceiling Light Installation Guide

MCL-3324900SN, MCL-3324900B
www.maxximastyle.com

⚠ WARNINGS ⚠

- Risk of electric shock - Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the wall light, please consult an electrician.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.

⚠ CAUTIONS ⚠


- To insure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinances.
- Min 90℃ Supply Conductors Les Fils D'alimentation 90℃ Min
- Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

INSTALLATION INSTRUCTIONS

Tools Needed: Screwdriver, drill, wire nuts, electrical tape.

If you are replacing an existing fixture, remove and disconnect the old fixture first.

1. Place the canopy against the ceiling in the desired orientation and mark the locations of the mounting keyhole slots.
2. If necessary, drill holes for drywall anchors in the marked locations and install the anchors.
3. Expose the power supply wires from the junction box.
4. Connect the green fixture ground wire to the junction box ground wire by using a wire nut.
5. Connect the white fixture neutral wire to the junction box white neutral wire by using a wire nut.
6. Connect the black fixture hot wire to the junction box black hot wire by using a wire nut.
7. Ensure all wires are tucked properly into the j-box. Align screw holes on canopy to junction box.
8. Using the provided mounting screws, secure the canopy to the j-box. Tighten the mounting screws until the canopy base is properly flush against the ceiling.
9. Place the diffuser on the canopy. Then place the metal ring on the diffuser. Align the ring mount tubes so they pass through the holes the holes on the metal ring.
10. Put the 4 decorative nuts onto the ring mount tubes to secure the ring and diffuser.
11. The installation is complete. Restore power to the fixture and verify the fixture operates properly.

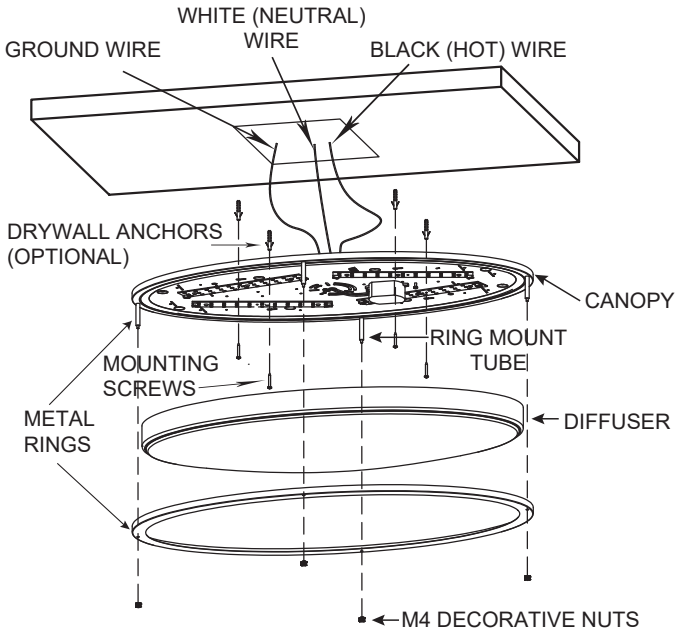


CCT Color Selection

Color Changing Temperature Adjustment, CCT (if desired).

1. Adjust CCT switches on each board accordingly to the desired color temperature as seen below. **All** boards must be set the same way.
   Note:Fixture is preset to 3000K from factory.Power to fixture must always be turned OFF prior to adjusting CCT switches.

COLOR TEMPERATURE ADJUSTMENT SETTING

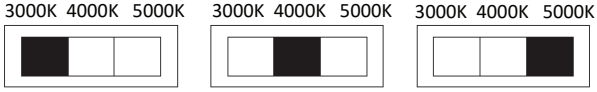

3 YEAR WARRANTY

Maxxima extends a 3 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warrantied product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

info@maxximastyle.com 866-MAXXIMA (629-9462) www.maxximastyle.com 125 Cabot Court Hauppauge, NY 11788